CL 93692 10/10/05 12:03 pm Page 1

INSTALLATION

TUMBLE DRYER VENTING

Your tumble dryer will release warm, damp air in one of these three ways:

(1) Front Venting. Venting through a grille on the plinth. A kit is available to convert to rear venting.

(2) Fixed Rear Venting. Venting through a hole at the bottom of the back panel. A vent hose is available to convert to extendible rear venting.

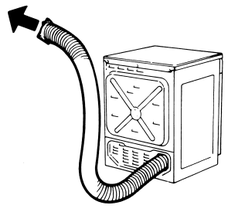

(3) Extendible Rear Venting. This contains a retractable vent hose.

The best solution is to make a permanent connection through either a wall or a window. This is particularly recommended for small, cool rooms and a kit for this purpose is available as an accessory. However, venting arrangement (1) requires that it be converted to rear venting before a permanent connection can be made.

The dryer can be used with or without a vent hose but,
When using a vent hose, remember the following points:

- The vent hose must be at least 10cm (4 ins) in diameter.
- No more than three right-angled bends should be allowed when positioning the vent hose.
- Do not distort or constrict the vent hose as this will reduce the airflow.
- The vent hose must not be shared with other appliances, for example, a cooker hood outlet.
- When drying, the vent hose must always be extended to an open door or window.

FINAL INSTALLATION

Place the filter in its operating position as shown in the diagram.

If you wish to change the side on which your door opens, see the instructions on the back page.

Remove any dust by wiping the drum and door with a damp cloth. Any initial smell from the heater should disappear after the first period of heating.

Position the tumble dryer so that the plug remains accessible after installation. Do not block the vent at the front of the dryer, as this will impair the working of the machine.

FITTING OF FILTER

Grip middle piece of filter with fingers.

Face the brush bar at the bottom edge of the filter to the front.

Slide the filter into the space below the door in a right angle position.

OPERATION

Open the door.

Load clothes loosely into the drum.

Load sheets first, starting with one corner.

Close the door.

Dry your hands.

Check that the timer is in the ‘0’ position.

Plug in the machine.

Select correct heat position (see programme chart on control panel for recommendations).

Set the timer to the required time setting (see programme chart on control panel for recommendations). then press start button.

The drum will begin rotating. Reversing drum models will stop every few minutes to rotate in the reverse direction for a short time.

Should the clothes become dry before the cycle has finished, or if an excessive programme time has been selected, the drum will continue to rotate while the thermostat will automatically switch the heater off to prevent over-drying and save energy.

There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM.

When drying large items such as sheets, we suggest you periodically stop the dryer to redistribute the load.

To stop the machine during the middle of the programme simply open the door; the drum will stop rotating automatically. To continue with the programme, close the door and press the start button.

To lengthen or shorten a timed programme, reset the timer knob.

AFTER REMOVING THE DRIED CLOTHES:

ALWAYS CLEAN THE FILTER. Failure to clean the filter will extend drying times and could cause the safety cut-out to operate. There are two types of filter your dryer main contain.

- Pull the filter upwards and away from the appliance.
- Remove any threads or fluff by hand or with a soft brush.
- Slide the filter back
- Wash the filter occasionally in detergent solution and with a soft brush to remove small particles.

THE CONTROLS

A. THE TIMER

Select the required drying time based on the recommendations on the control panel.

B. ANTICREASE

If selected, this will minimise creasing by periodically rotating the drum after the drying has finished.

C. HEAT SWITCH

Select the required heat setting based on the recommendations on the control panel.

D. START BUTTON

Press the start button after selecting the required drying time

E. FULL HEAT SELECT LIGHT

F. ANTICREASE SELECT LIGHT

G. DRYER ON LIGHT

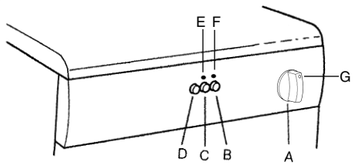

Lights will not illuminate until the timer has been set and the start button pressed.

PREPARATION

Check care labels inside the garments.

CARE LABELS YOU MAY FIND ON YOUR FABRICS

Suitable for tumble drying
Tumble dry using full heat
Tumble dry using half heat
Do not tumble dry

Do not tumble dry woollen or wool mixture articles unless the article is labelled to be suitable due to a possibility of shrinkage.

Roll dripping wet articles in a towel to remove excess water.

Place delicate articles e.g. tights, scarves, inside a pillowcase.

To avoid the need to iron easycare polyester/cotton items it is better to only dry small loads (i.e half fill drum).

It is better to dry small and large articles together.

We suggest a fabric conditioner to be used to reduce static electricity.

Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important that the airflow through the dryer is not obstructed.

Do not place items contaminated with inflammable substances in the dryer, such as petrol, cleaning solvents, cooking oil, fat, or hair lacquer. These can cause fires. For the same reason, do not dry rubber, foam rubber, plastic or paper.

ADDITIONAL INFORMATION

ANY PROBLEMS

If the clothes are **not dry** after normal drying time:

- Check that you used the correct heater setting.
- Check that you have not set the timer within a cool down period.
- Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
- Check that your dryer is heating - below the door to the right side, should feel warm to the touch after the first 10-15 minutes of its programme. Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine. If it has operated, a sharp “click” will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean, the air inlets and outlets at the front and back are not blocked, and that all other restrictions are removed before re-starting.

  If the cut-out continues to operate after checking the above points, you should contact your service agent.

If your machine **does not work** check the following before calling a service engineer:

- Check that there is a supply of electricity.
- Check that the door has been properly closed and the machine is switched on.
- Check the plug internal connections.

OPTIONAL EXTRAS

Front to Extendible Rear Venting Kit

To convert your dryer from front venting to extendible rear venting.

Vent Hose

Only available for fixed rear dryers. Leads the warm, damp air to an open door or window.

Wall/Window Vent Kit

To make a permanent connection through a wall or window. Front venting dryers need converting to rear venting before installing this kit (see ‘Front to Extendible Rear Venting Kit’ above).

Stacking Kit

To enable your dryer to be secured onto the top of a front loading washing machine (to save floor space).

The above items can be purchased as accessories for your tumble dryer from your supplier.

TECHNICAL DATA

OVERALL DIMENSIONS:

Height: 85 cm Width: 59.5 cm Depth: 53 cm

MAXIMUM DRY WEIGHT LOADS:

Cotton 6kg
(for minimum creasing 2kg)
Delicates 2kg

For electrical ratings see plate on back of dryer.
For Model No. see serial plate inside door *(needed when requesting service).*
Room temperature range 5˚C to 30˚C.
Your washing machine should have a spin speed of not less than 800rpm.

REVERSING THE DOOR OPENING

1

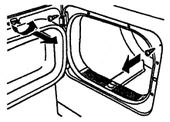

Large Door Opening:-

First remove the child safety peg from the top of the door by rotating 90° anticlockwise. Now unscrew the door hinges from the machine by removing the 4 screws. Do not use a power screwdriver as this may damage the threads. Remove the four screws from the opposite side of the door opening. Place these screws in the other side of the door opening.
Reverse the door and re apply the hinge screws.
Replace the child safe peg in the top of the, now reversed, door.

Infomation:-

DSG RETAIL LTD IS RESPONSIBLE FOR AFTER SALES SERVICE AND ANY CLAIMS IN RESPECT OF THIS LICENSED PRODUCT. IF YOU HAVE A QUERY ABOUT THE PRODUCT PLEASE CONTACT OUR CURRYS PRODUCT SUPPORT LINE (08701) 565550

INSTRUCTIONS FOR USE

KENWOOD

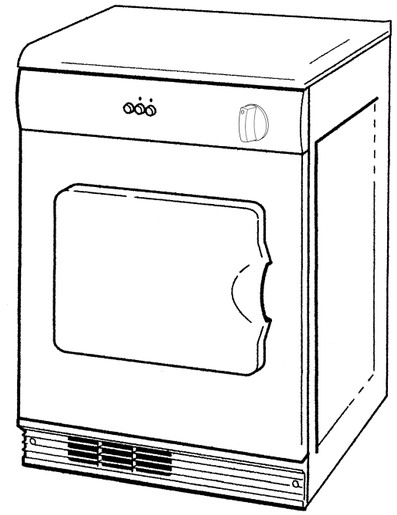

IMPORTANT:
PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS APPLIANCE.
KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

IMPORTANT USER INFORMATION

These notes are provided in the interest of safety.
You must read them before installing or using the appliance.

- This tumble dryer is intended for **NORMAL DOMESTIC USE ONLY.**
- Please note it is not recommended that the dryer be placed directly next to ovens or cookers, as the performance of the dryer may be affected.
- Adequate ventilation must be provided to avoid back flow of gases into the room from appliances burning other fuels, including open fires.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is dangerous to alter or modify the product in any way other than fitting authorised accessories.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if it is to be left unattended for long periods (i.e. weekends, holidays etc.)
- The rear of the dryer gets quite hot during use, position the dryer so that the back is not accessible while in operation, but the sides have a space available to allow airflow.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.
- **DO NOT** use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.
- **DO NOT** block the air inlets at the front and back of your dryer.
- **DO NOT** allow fluff to accumulate around the tumble dryer.
- **DO NOT** exceed the recommended maximum load.
- **DO NOT** allow children to tamper with the controls and keep them away from the dryer when it is in operation.
- **DO NOT** place articles in the dryer if anything other than a water solution has been used in the cleaning process.
- **DO NOT** attempt to dry dripping wet articles or items containing foam rubber or rubber-like materials.
- **DO NOT** use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local appointed service engineer and insist on genuine spare parts.
- If the mains cord is damaged it must be replaced by a special cord available from the manufacturer or its service agents.

CAUTION-HOT SURFACE

This label, positioned on the rear of your dryer, indicates that the surface will get hot when operating - avoid touching

THIS APPLIANCE MUST BE EARTHED

CL 93692 10/10/05 12:03 pm Page 2